Oxford Firepit Installation Instructions

Nantucket Pavers, Inc.
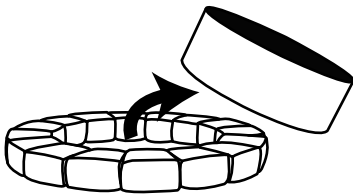
1-Set the ring on a flat even surface.

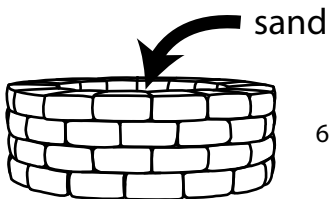2-Lay out the first course of 16 blocks around the ring insert.

3-Make sure the gap between the ring and blocks are even all around, and that the ring can be removed with ease.
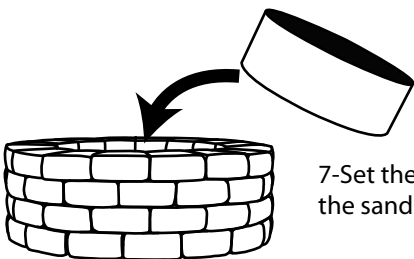
4-Remove the ring insert and set it aside.

Joints are staggered

5-Lay out the next 3 courses keeping the joints staggered.(Masonry adhesive may be applied between layers, securing them in place permanently.)

sand

6-Fill the inside with the 3 bags of sand provided, and spread it out evenly.

7-Set the ring back inside the firepit and press it down to set it in the sand. It should sit just below the rim of the firepit blocks.